



INSTALLATION GUIDE


WHOOPHOO MOBILE VIDEO INTERCOM

2025
2026

Whoophoo

www.whoo.hoo

FOLLOW THE INSTALLATION STEPS

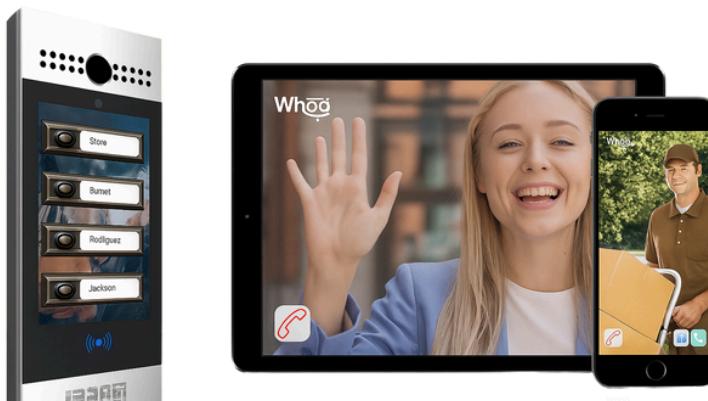

Support: +1 (229) 4666 950 / support@whoo.ai

STEP 1

Verify that door strike works:

- Find wires connected to the old intercom that active the door strike.
- Verify that the door strike works by manually closing the circuit.
- Mark cables.

STEP 2

Determine how the Whoo.ai Intercom is going to connect to the internet:

- Simple Cable Modem: most installations are with cable modems.
or
- Cell modem: check signal strength via a Local Area Network.
or
- Some installations have a router or other networking components between the Whoo.Ai intercom and the Modem (e.g. Point-to-point bridges).

If so, first ensure that the network works properly using a laptop.

STEP 3

Locate switch/router and plan Ethernet cable routing:

- Create a rough estimate of how hard it would be to run the cat 5 cable: _____ hours.

Then choose:

NOTE: Ethernet cables cannot be more than 100 m (300 ft) long. Use 1 PoE extender close to the middle of a 200 m (600 ft) span. If longer, use EoTP (Ethernet over Twisted Pair) and a new twisted pair.

Then choose:

- To plan cable routing: follow hanging lamp outlets or existing cables. It is better to go behind crown molding (modern) or in ceilings. *Cut ceilings if necessary and patch them later.*
or
- If routing cat 5 cable is hard (you estimated more than 4 hours of work): Find existing twisted pair from old unit to a reasonable place close to the router to use with EoTP.

STEP 4

Ensure there is an Ethernet port available at Modem or router:

- If yes, then connect the PoE injector.
or
- If no Ethernet port is available, add a PoE switch instead of the PoE injector.

STEP 5

Test internet speed:

- If yes, then connect the PoE injector.
or
- If no Ethernet port is available, add a PoE switch instead of the PoE injector.

STEP 6

Remove old intercom:

- Preserve electric strike trigger cable and terminate others.

NOTE: Be careful not to disable other systems (card readers, security, separate mailman key locks. These should connect in parallel to our trigger cable.

STEP 7

Route the Ethernet cable and install RJ45 terminals:

- Test cable/terminals.
- Connect to cable modem with PoE Injector or PoE switch.
- Test internet speed with a computer (or cellphone and ethernet adapter) at intercom's end of cable.

<https://speed.measurementlab.net/>

NOTE: If you test using your cell phone, make sure to put your phone into airplane mode to ensure that it connects to the internet through the ethernet cable.

STEP 8

Install the appropriate mounting bracket for the Whoo.ai Intercom:

- Three options: surface mount, flush mount, or drywall flush mount.

STEP 9

Connect the Whoo.ai Intercom:

- Use solid core copper cable to patch existing door strike trigger to relays (use Normally Open side of relays).
- Plug in Ethernet cable to the Whoo.ai Intercom. This brings power and internet access.
- Secure the weather proofing case in the back of the Whoo.ai Intercom.

STEP 10

Attach Whoo.ai Intercom to the mounting bracket:

- Make sure that the top lip fits snuggly and both hex screws are tight but not forced.

STEP 11

Test:

- Make sure Whoo.ai Intercom starts up correctly (it takes 15 seconds before the buttons appear on the screen)
- Make sure doors open properly using the delivery button on the Whoo.ai Intercom.
- Make sure you can see through the camera (using admin tool).

STEP 12

Give admin the go ahead to run tests, configure and share with residents:

- Help the administrator download and pair their admin tool.

PLEASE INCLUDE A PHOTO OF THIS COMPLETED
CHECKLIST WITH YOUR REPORT OF THE COMPLETED
WORK TO:

SUPPORT@WHOO.AI

WHOO.AI MOBILE INTERCOM
+1 (229) 466 6950 / SUPPORT@WHOO.AI



GET IN TOUCH
**REAL STATE
AND BUILDINGS**

WWW.WHOO.AI

+1 (229) 4666950

60 POWELL STREET #1 BROOKLINE, MA

